


Instruction

# H-piece valves, type RLV-KB

two pipe system

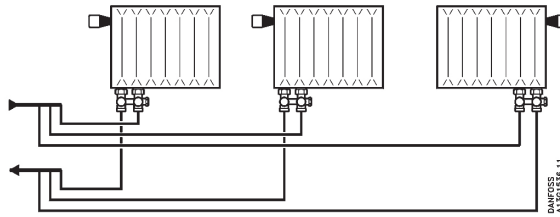

**G<sup>1/2</sup>**

1) 10mm  
20 - 30 Nm

2) 30 - 40 Nm  
Do not re-use adapter after disassembly

**G<sup>3/4</sup>**

1) 30 - 40 Nm

! The radiator has to follow DIN V3838

**OPEN**

**CLOSED**

**Danfoss A/S**  
Heating Segment • heating.danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without consequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.