 
 



Paigaldusjuhend

FLORY
FSR18035SA




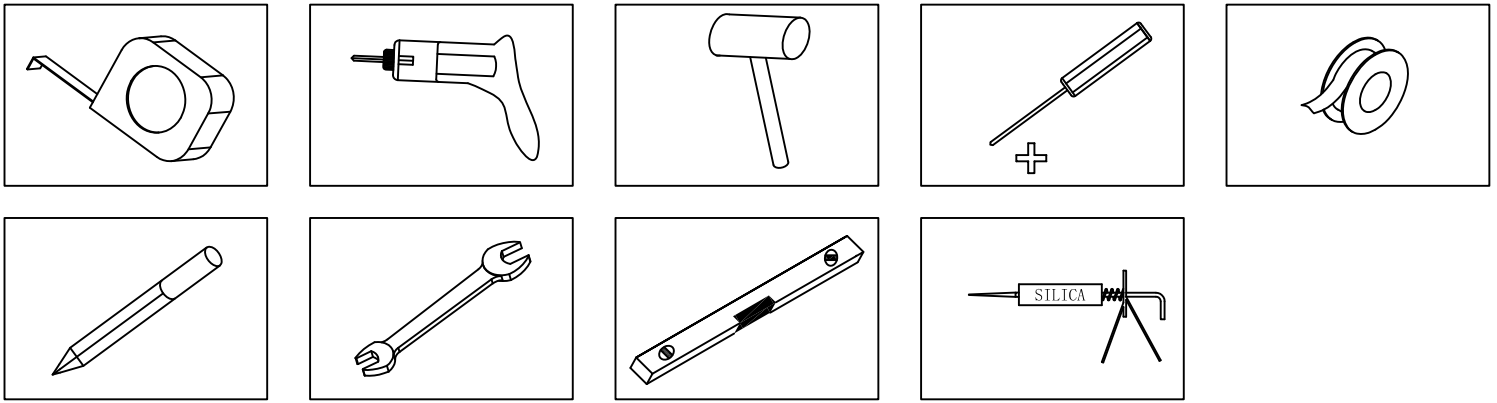


(01)		X1	(11)		X2	(21)		X8	(31)		X4
(02)		X1	(12)		X1	(22)		X2	(32)		X1
(03)		X2	(13)		X1	(23)		X2	(33)		X4
(04)		X2	(14)		X1	(24)		X4	(34)		X2
(05)		X1	(15)		X2	(25)		X2	(35)		X2
(06)		X4	(16)		X1	(26)		X4	(36)		X1
(07)		X1	(17)		X2	(27)		X2	(37)		X3
(08)		X1	(18)		X1	(28)		X2	(38)		X2
(09)		X8	(19)		X4	(29)		X2	(39)		X1
(10)		X8	(20)		X2	(30)		X2			




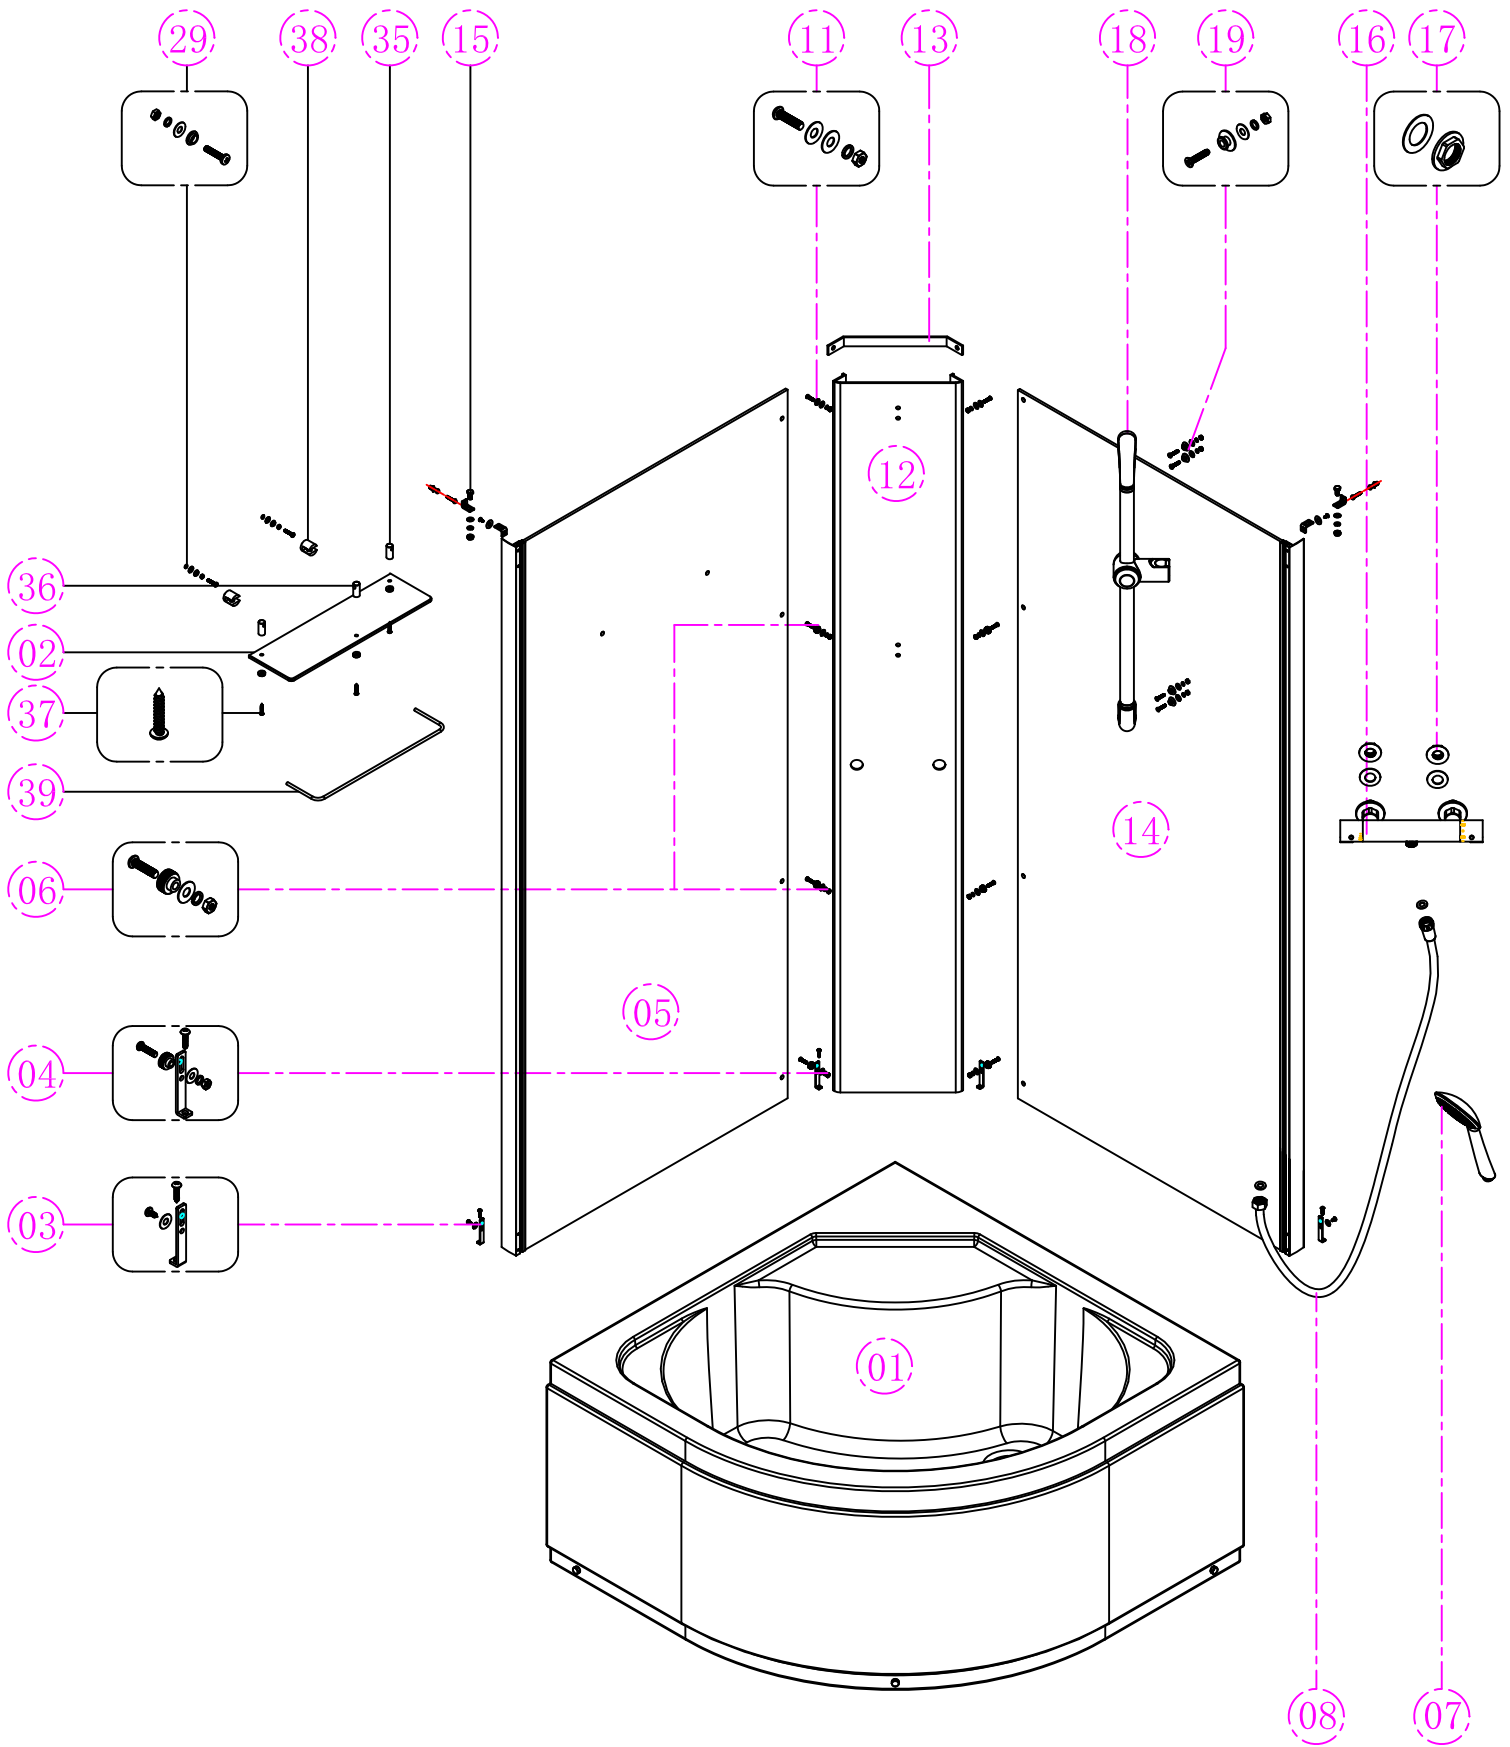


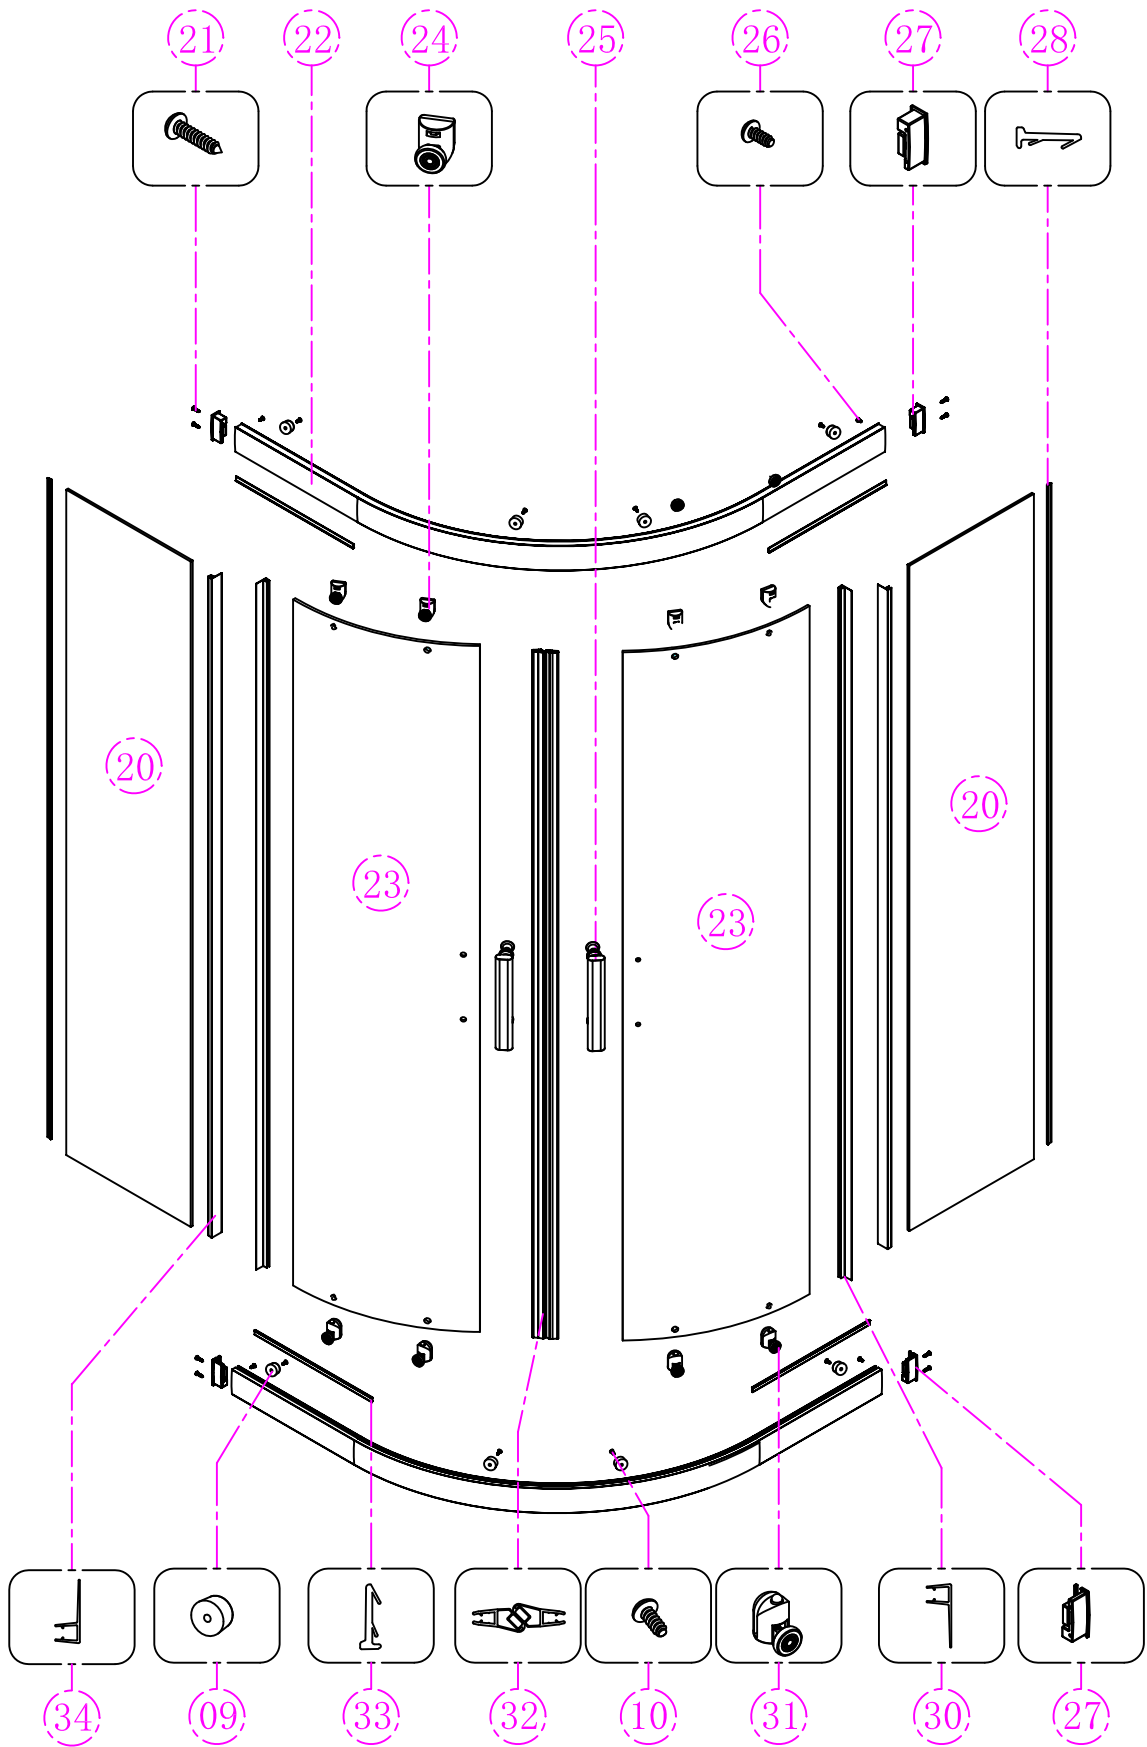 

    1.)

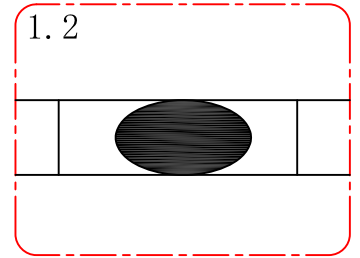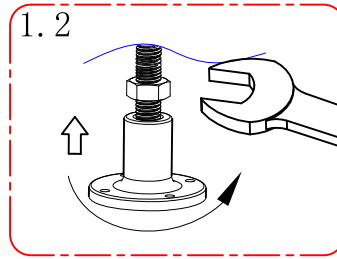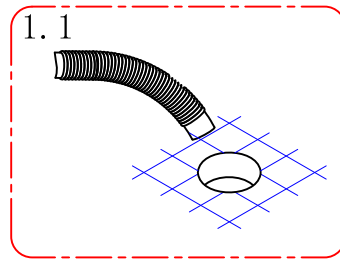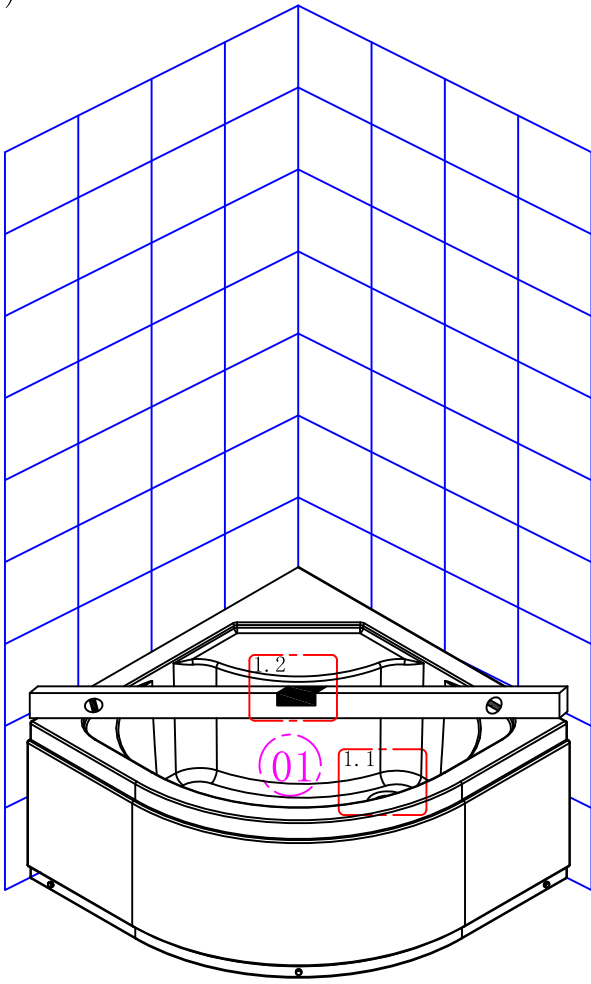


    2.)

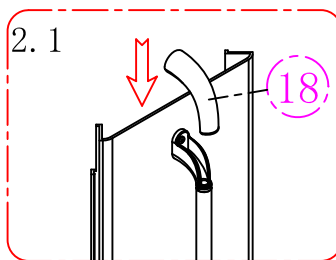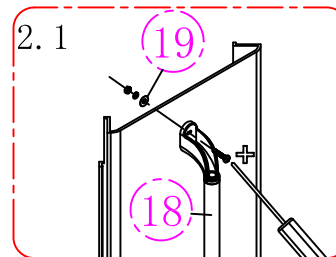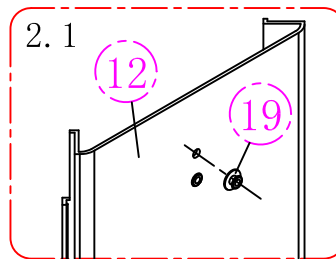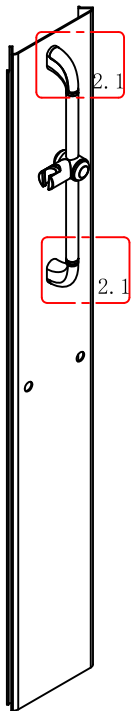

3.)





 
Eelseadistatud 38°C

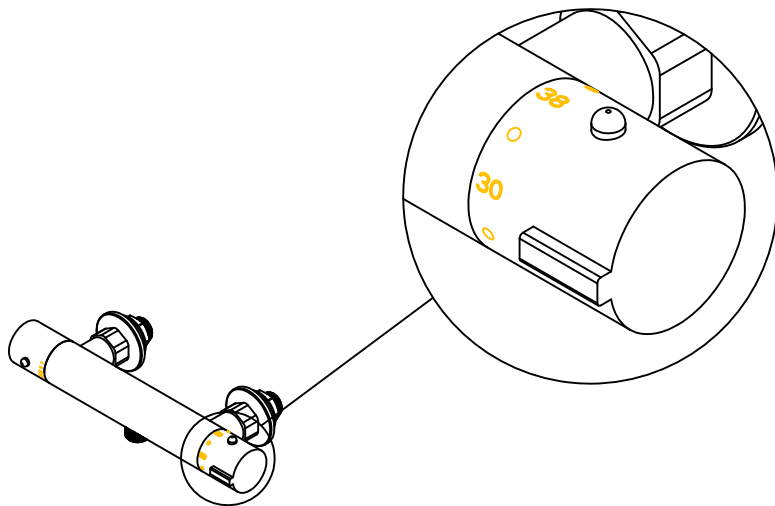







Kuumema vee saamiseks vajutage piiraja nuppu ja keerake käepidet päripäeva

Külmema vee saamiseks keerake käepidet vastupäeva

 
 
 
 
 
4.)

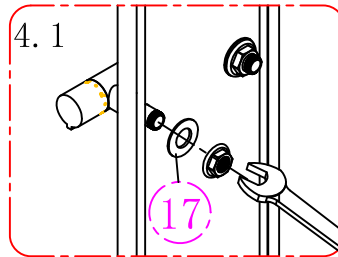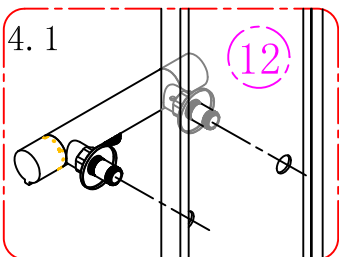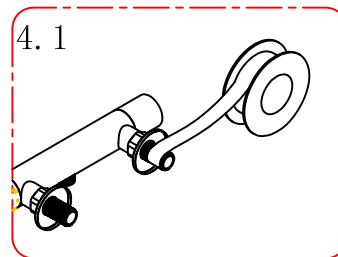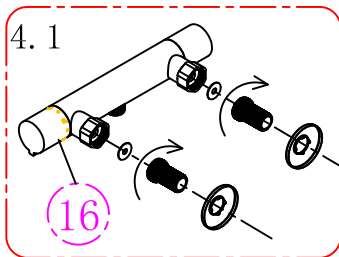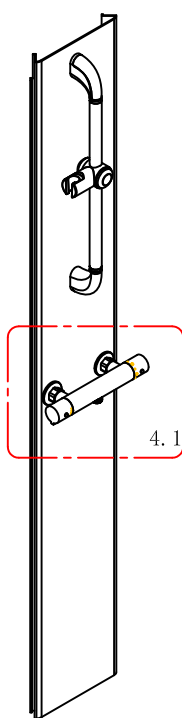

   
 
 
 
5.)

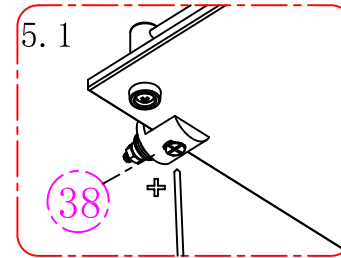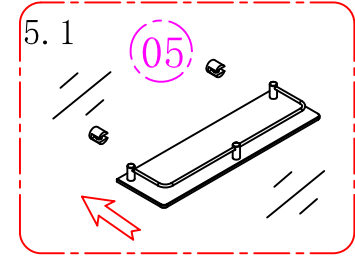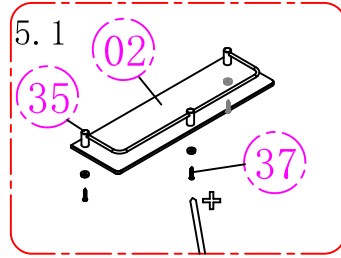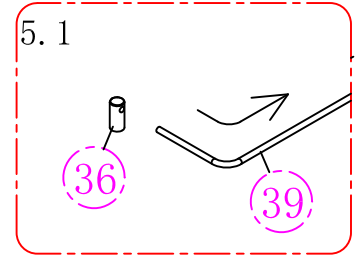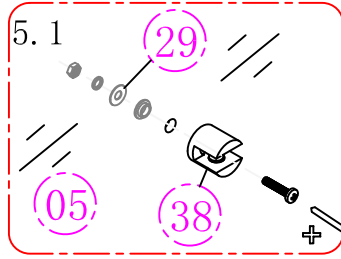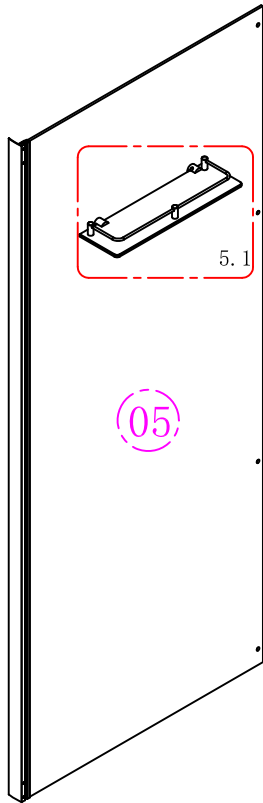



 
 
 
 
 
6.)

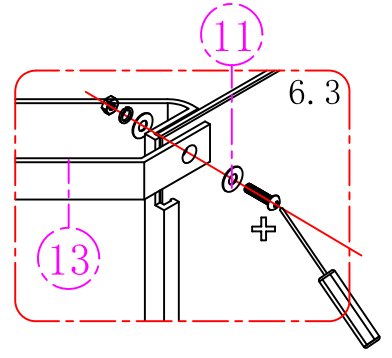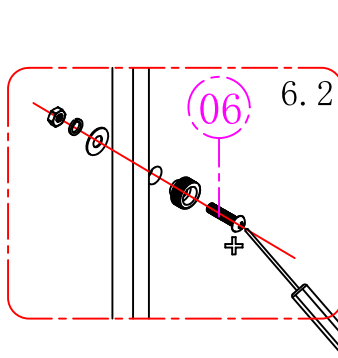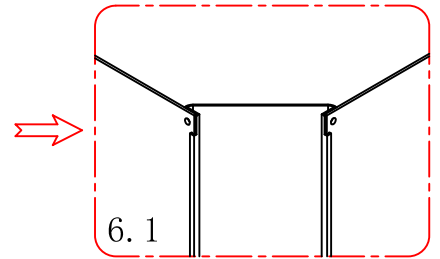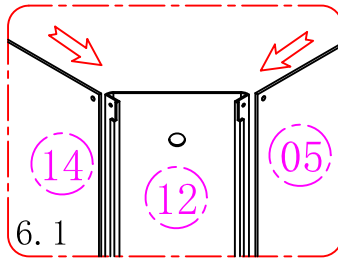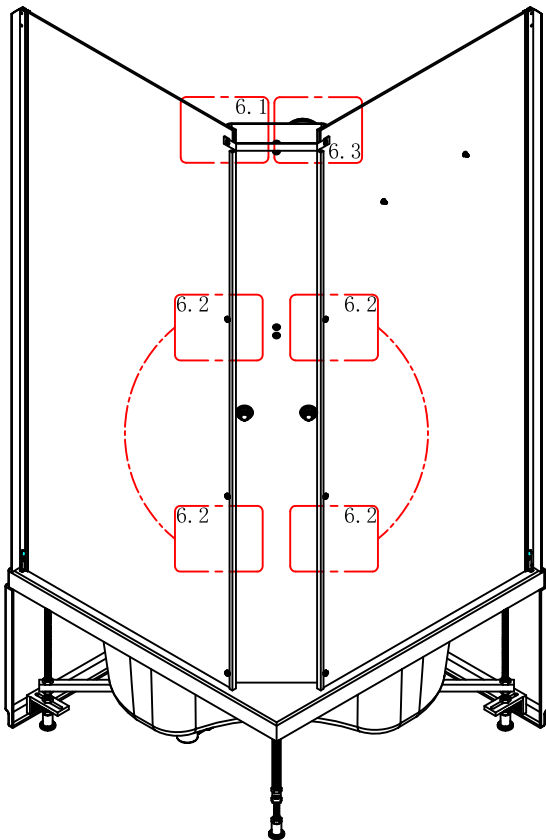



 
 
 
 
7.)

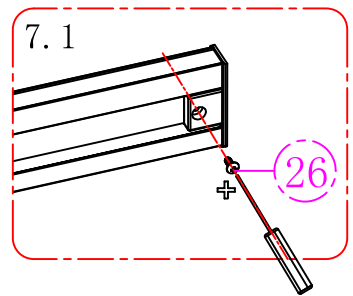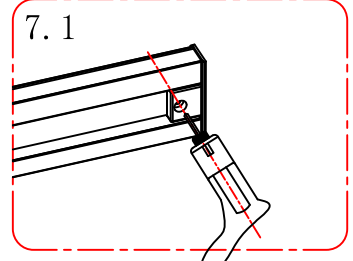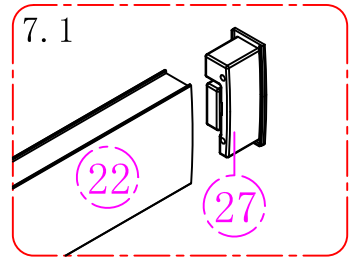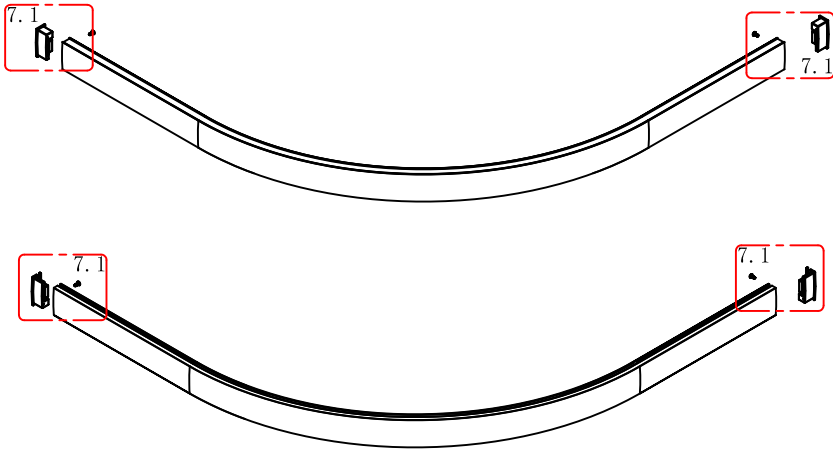

     
 
 
8.)

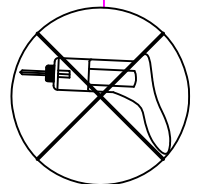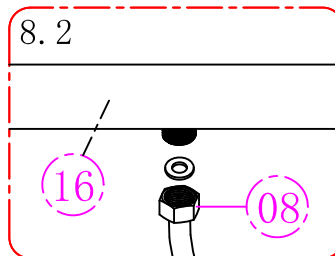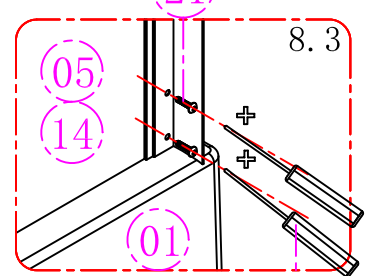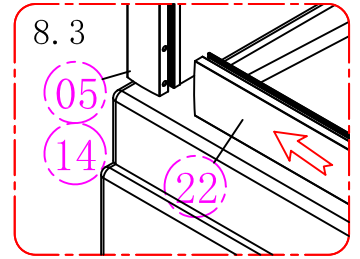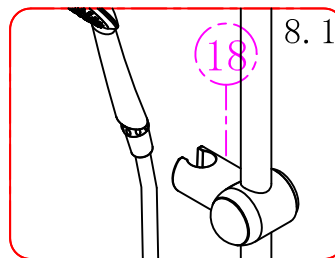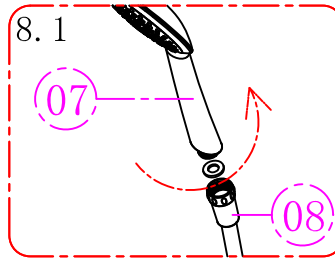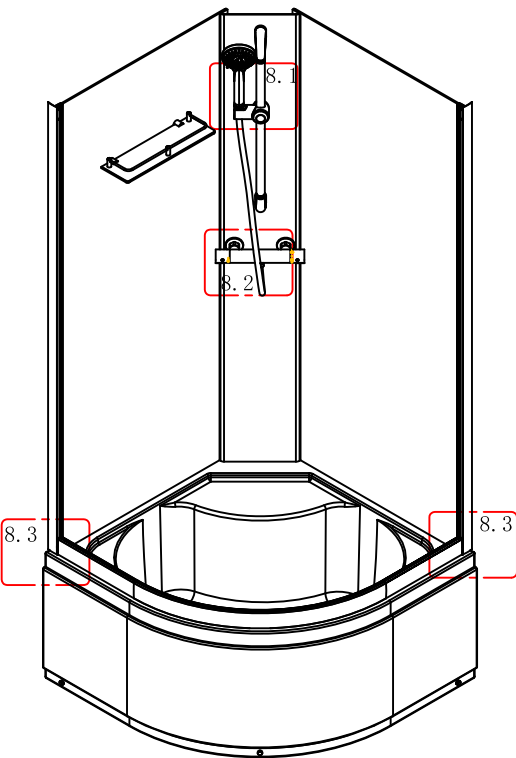


 
 
 
 
 
 
9.)

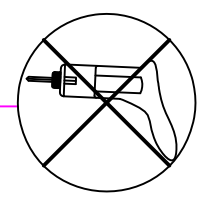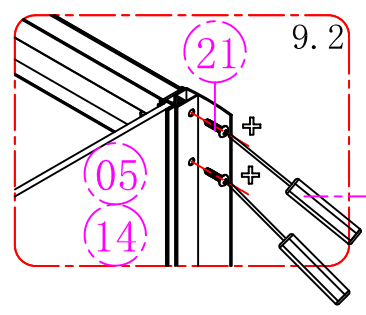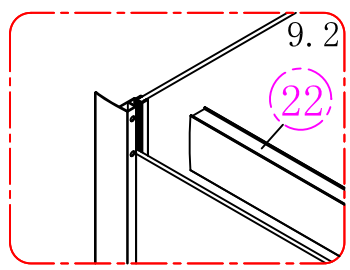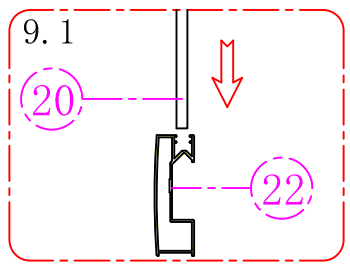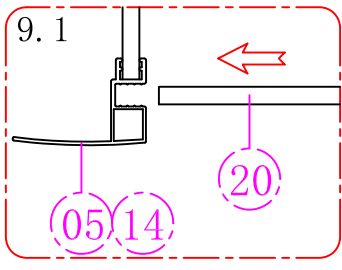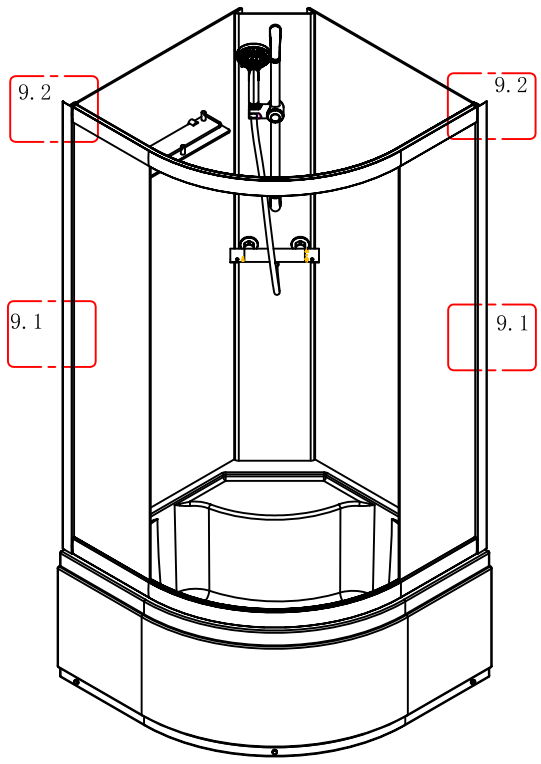




 
 
 
10.)

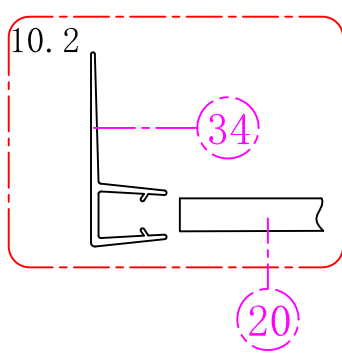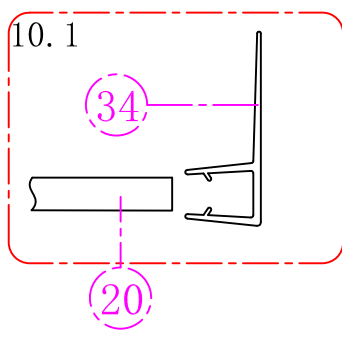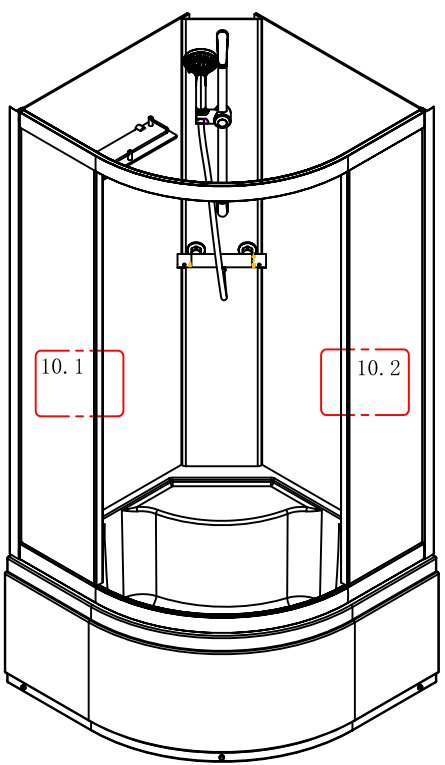

       
11.)

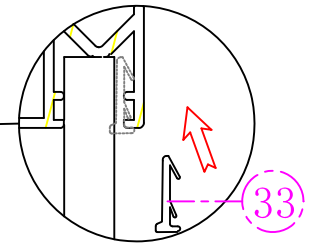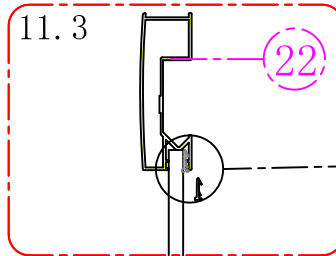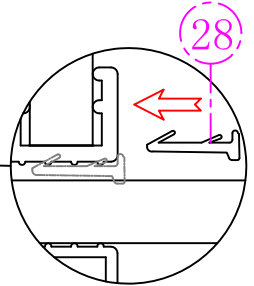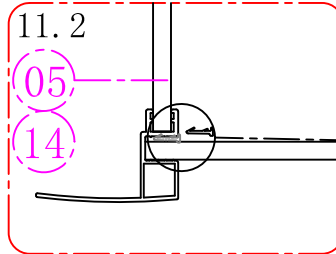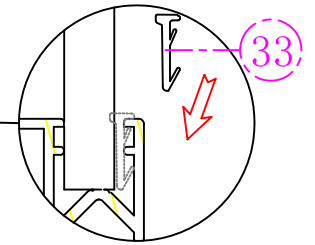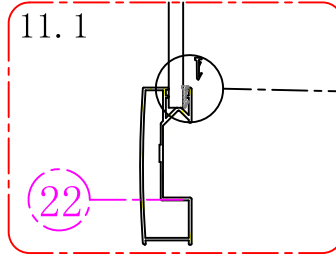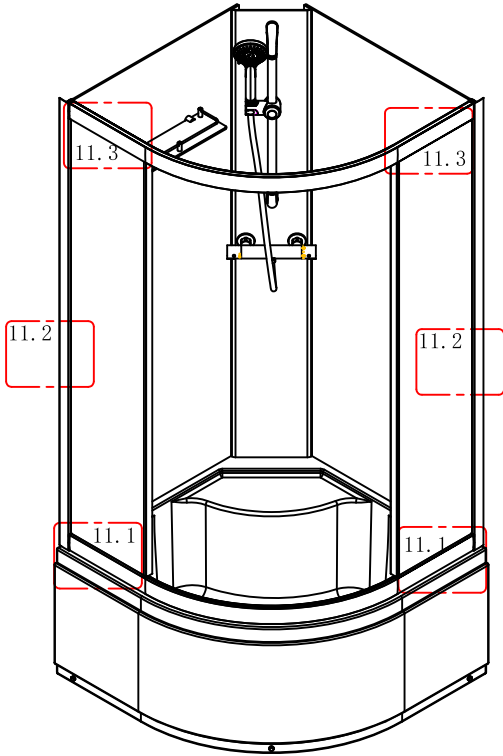

      
12.)

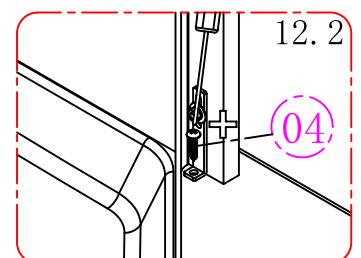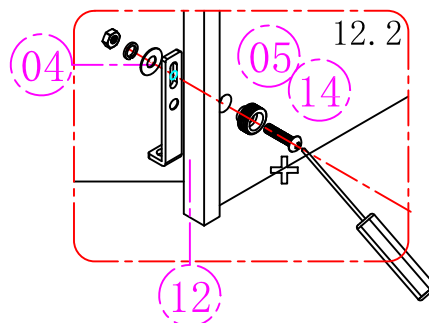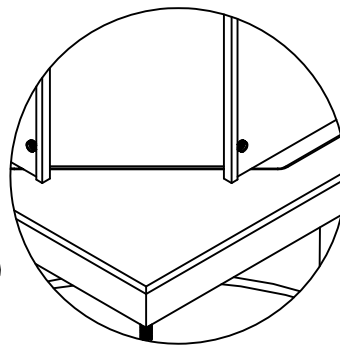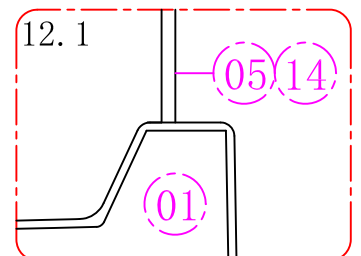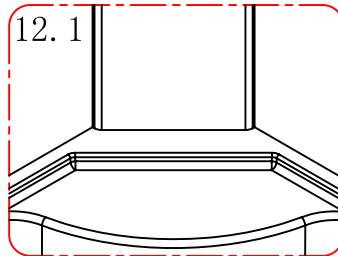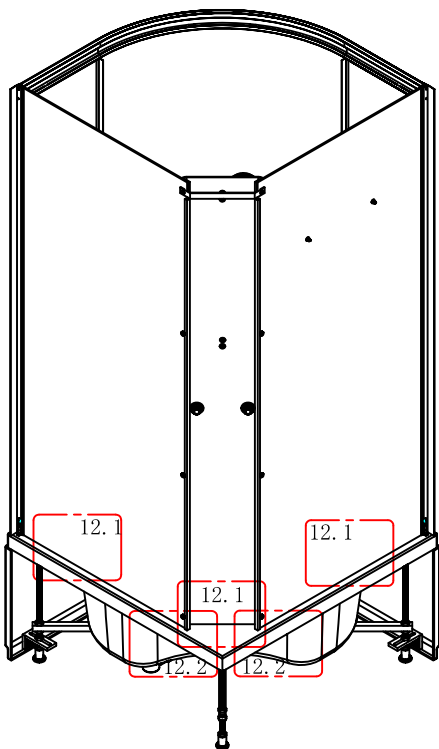

 
13.)

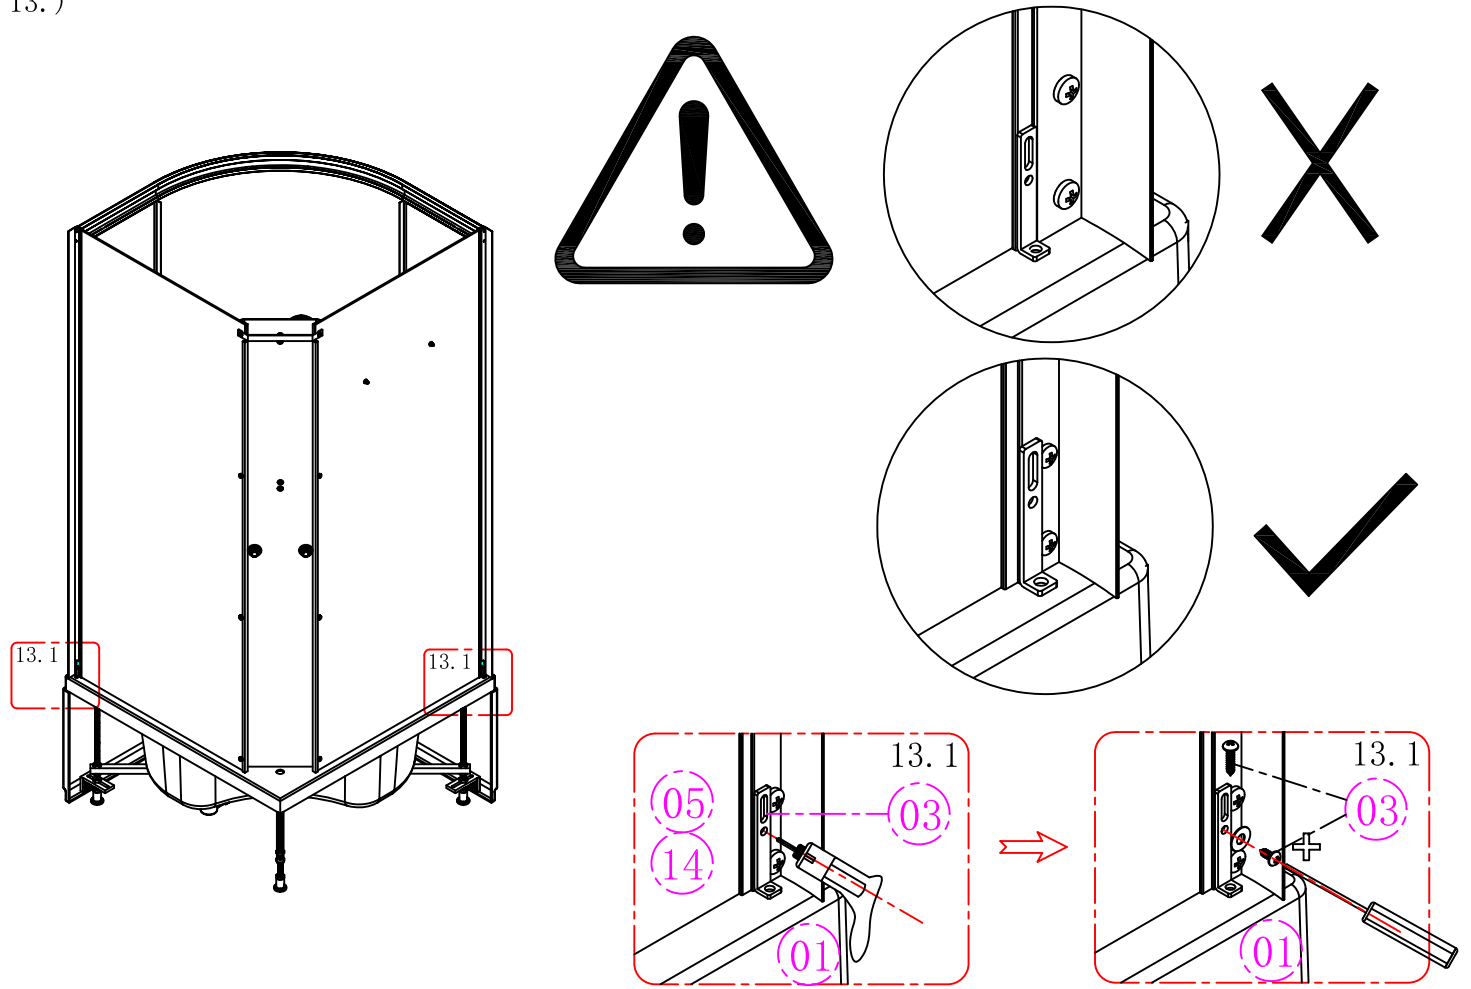

 
14.)

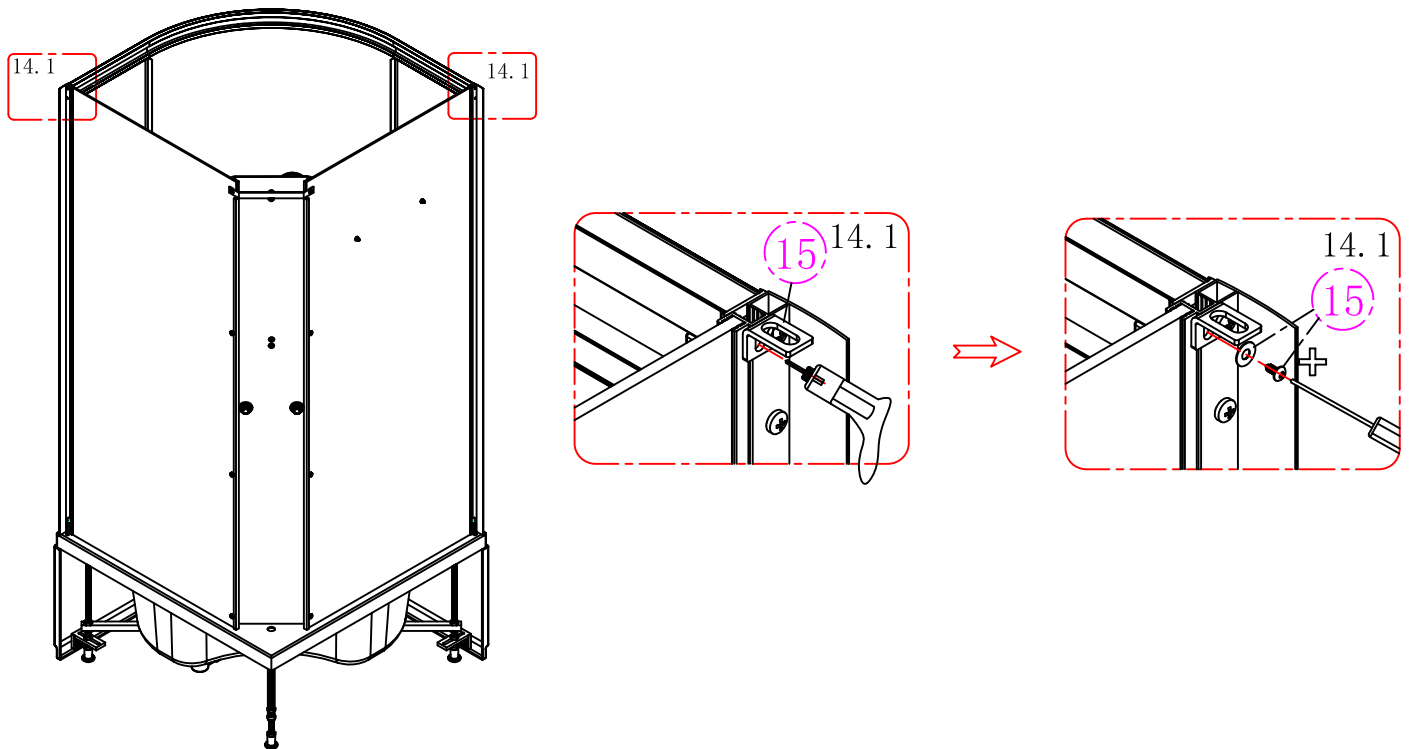

 
15.)

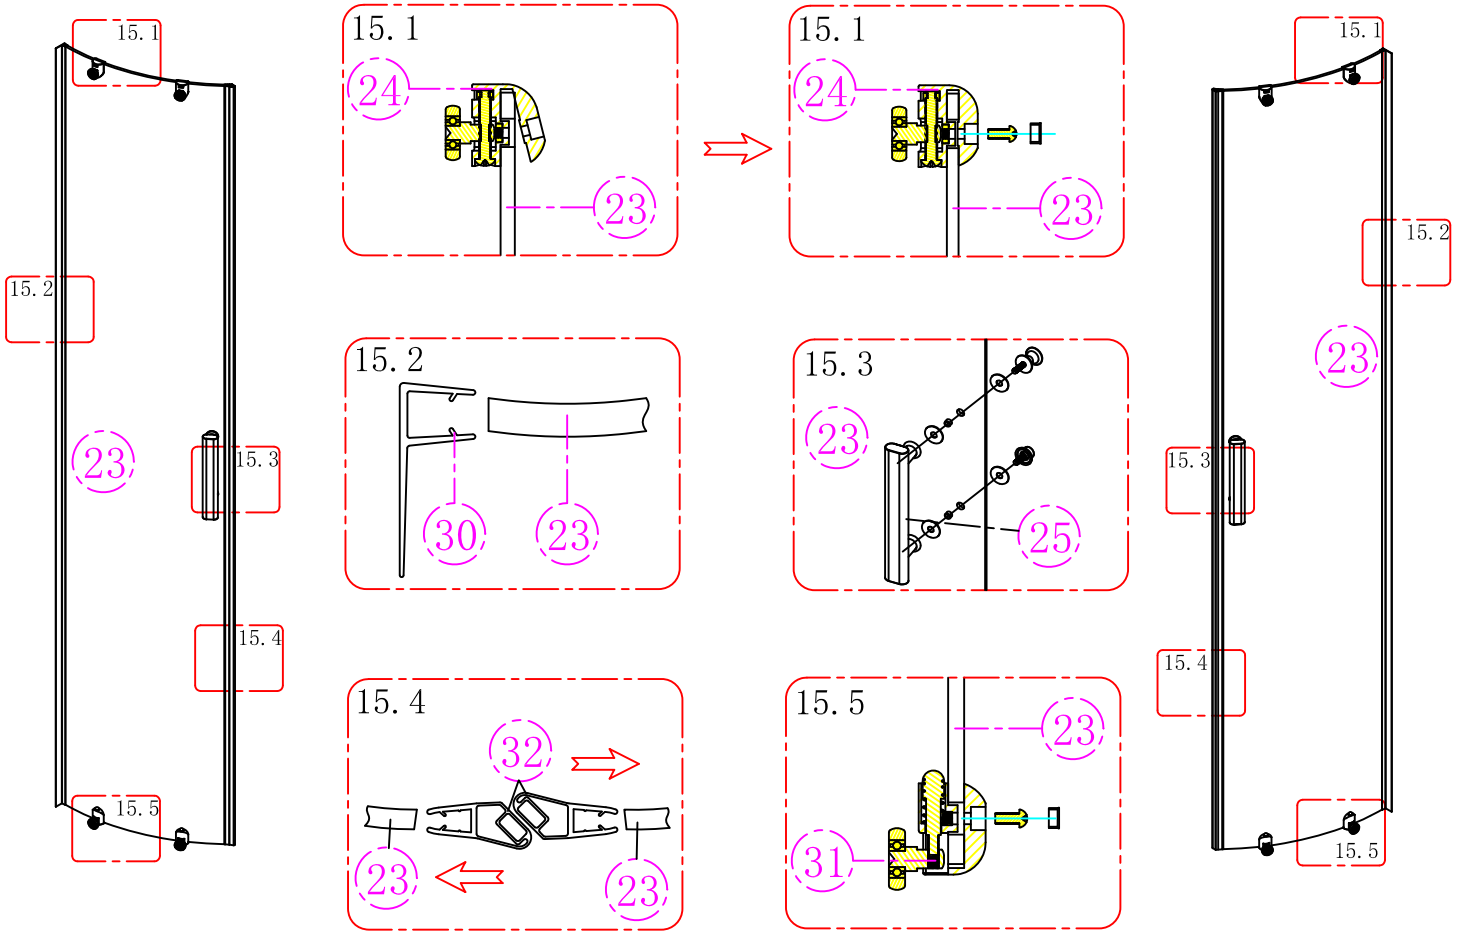

 
16.)

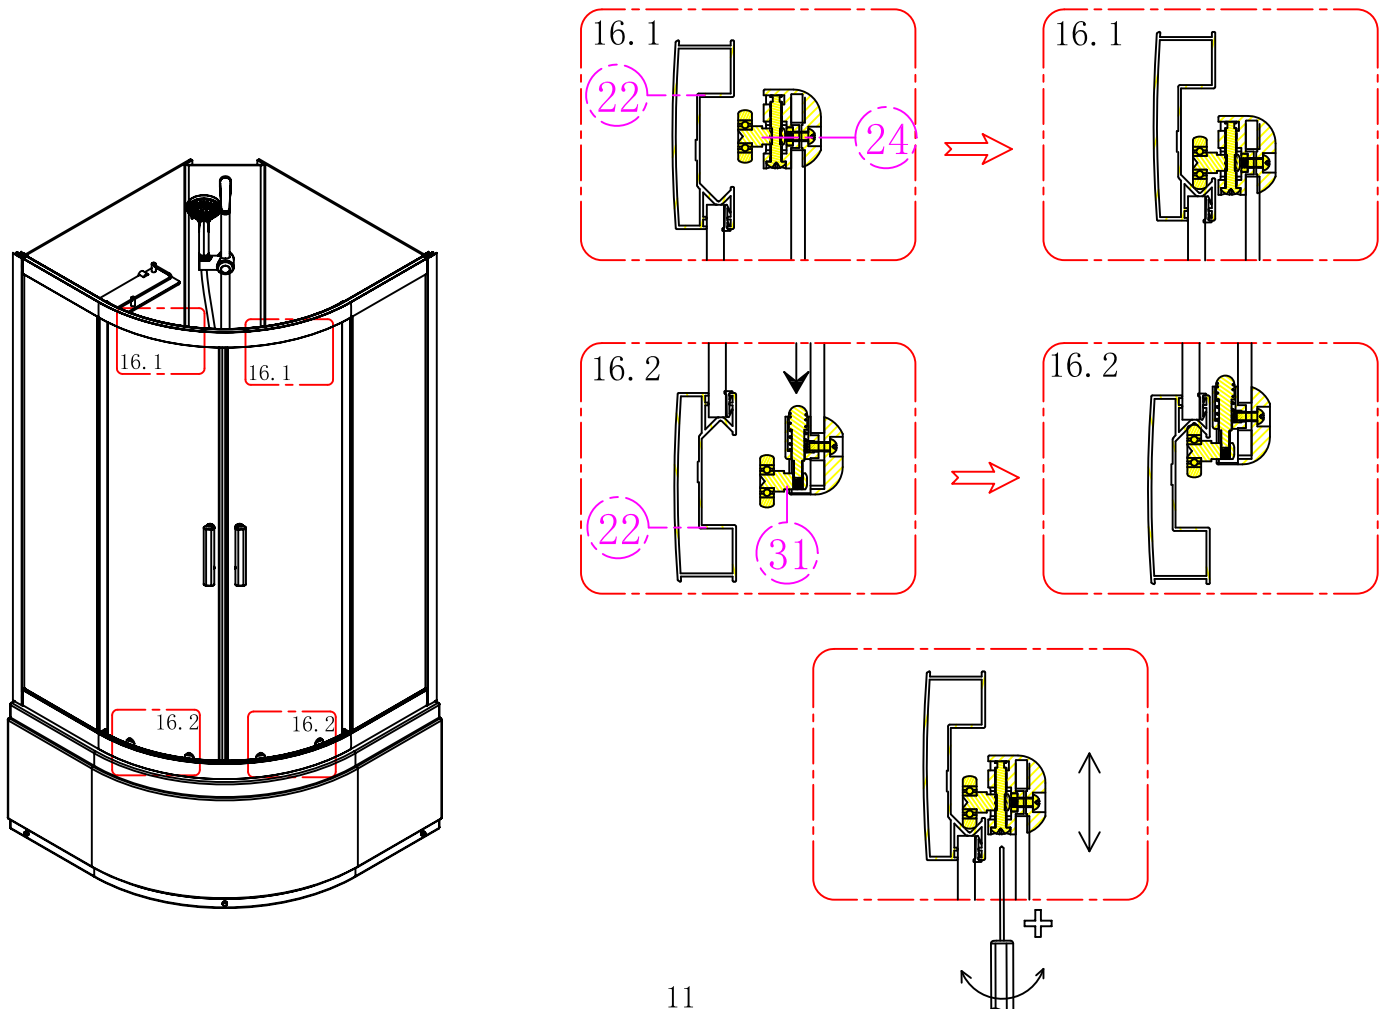

 17.)

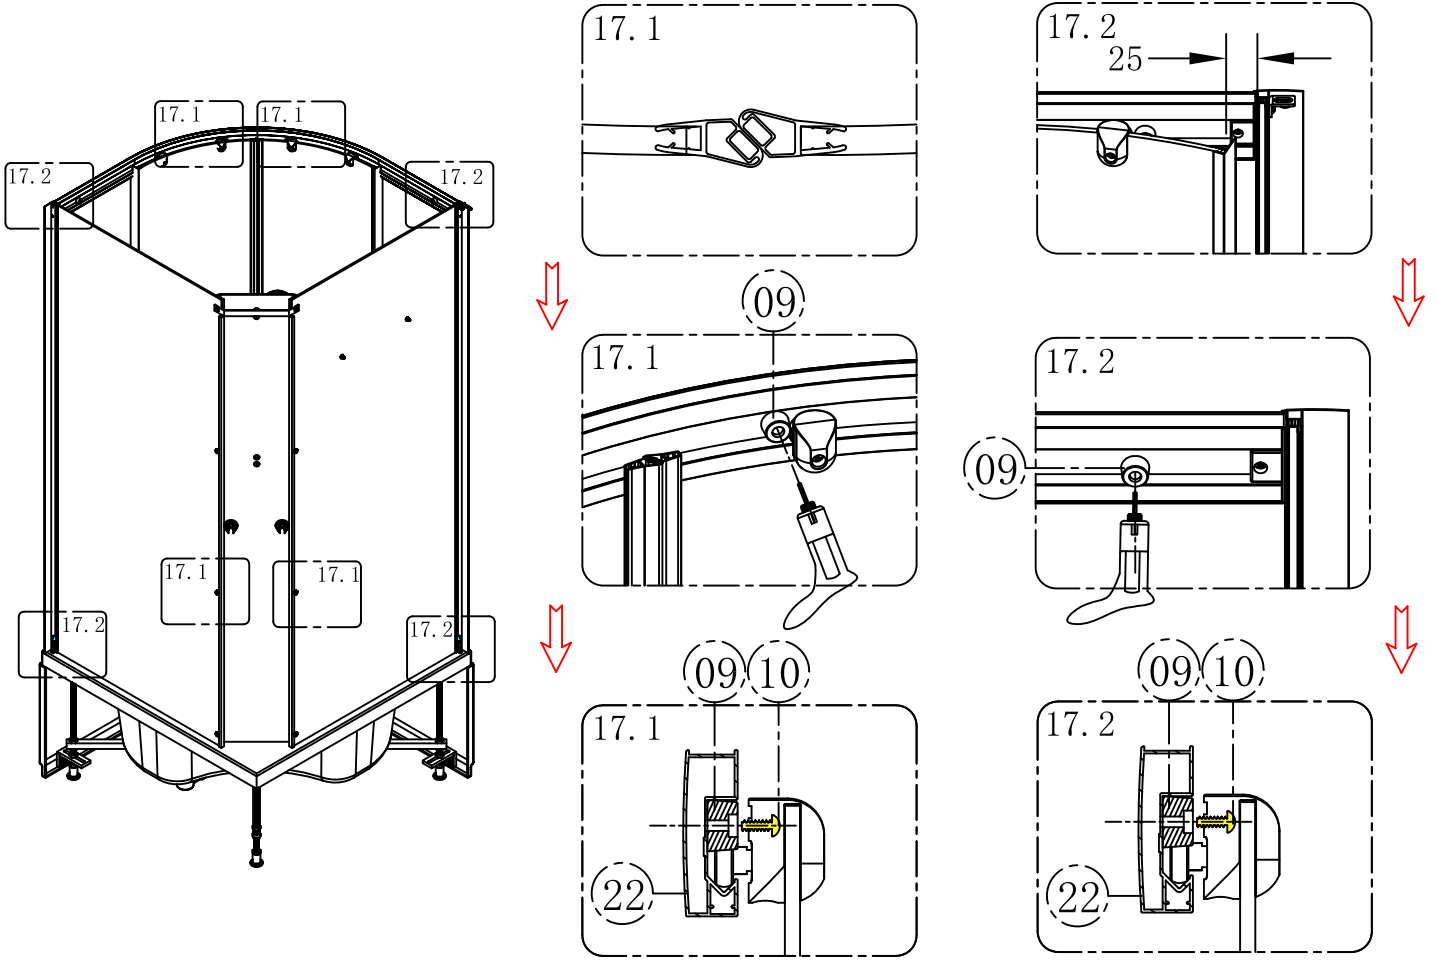

 18.)

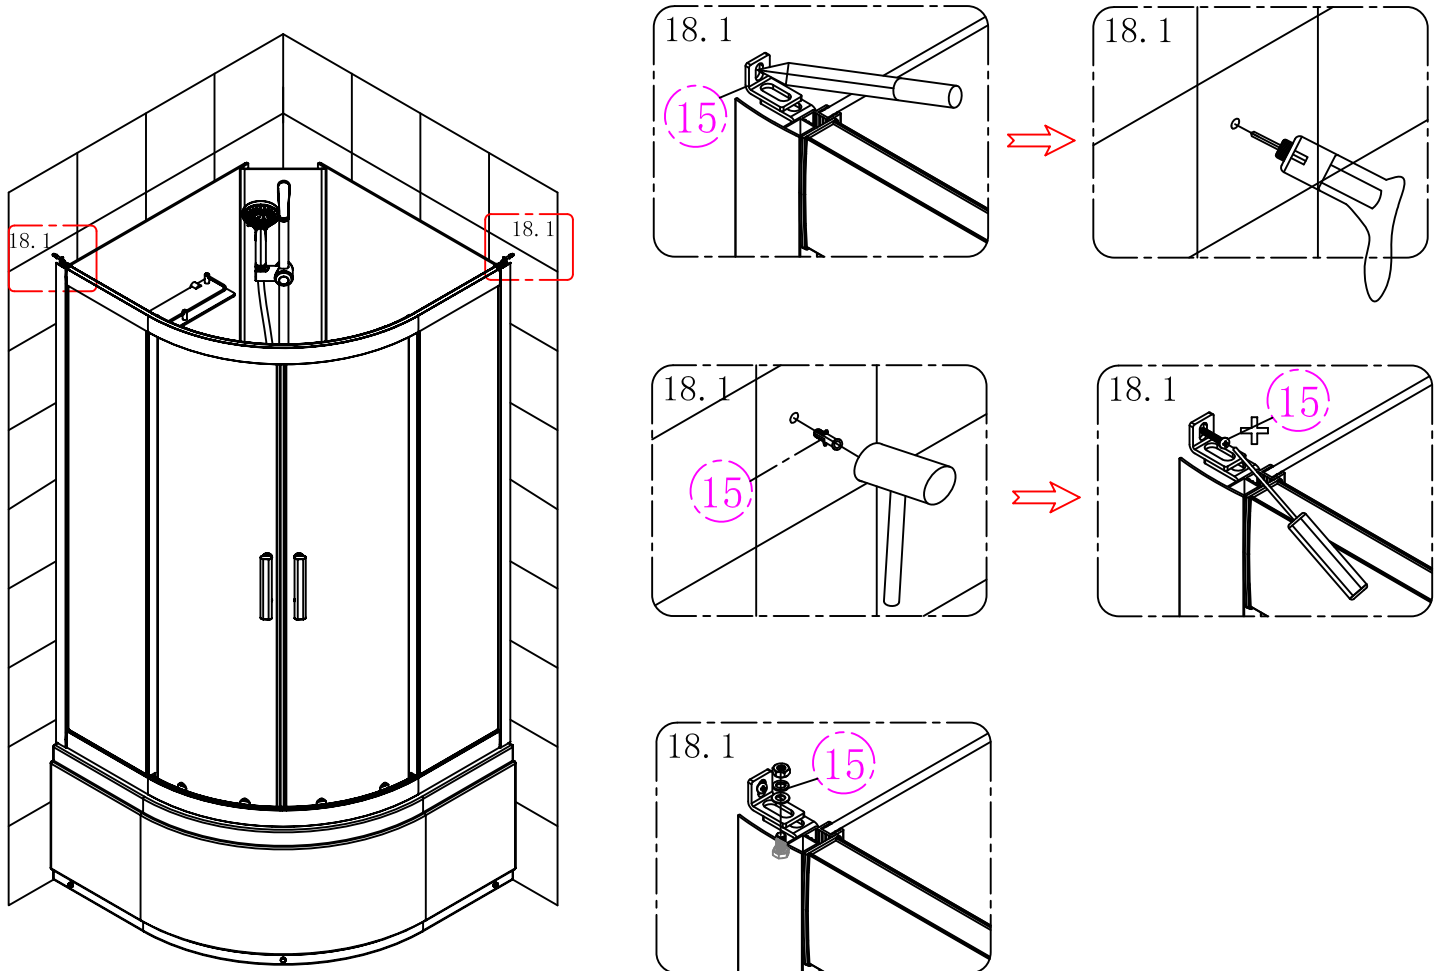

19.)

