

 
 
Mureva Lights User Manual



IMT47208 IMT47209





Model: IMT47208/IMT47209
 Material : Aluminum+Glass
 Watt : 20W
 Voltage : 220-240V~50Hz
 Input current: 0.092A
 Lumen: 2000LM
 CCT: 4000K/6500K
 Size : 167x127x33mm
 Net Weight : 530g
 Beam Angle : 110°
 PF : 0.9
 Lighting area :0.021m²

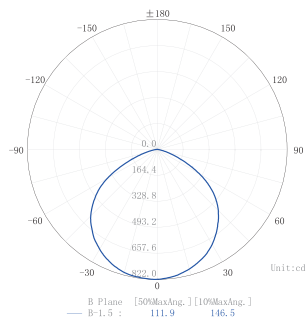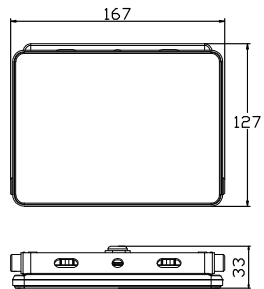

IMT47210 IMT47211



 
 
Model: IMT47210/IMT47211
 Material : Aluminum+Glass
 Watt : 30W
 Voltage : 220-240V~50Hz
 Input current: 0.136A
 Lumen: 3000LM
 CCT: 4000K/6500K
 Size : 193x145x35mm
 Net Weight : 780g
 Beam Angle : 110°
 PF : 0.9
 Lighting area :0.028m²

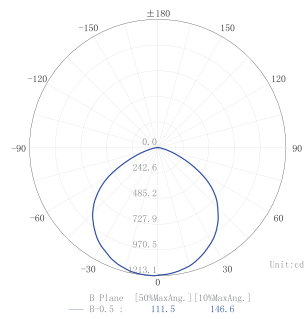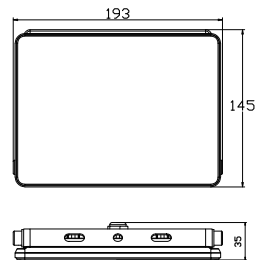

IMT47212 IMT47213



 
 
Model: IMT47212/IMT47213
 Material : Aluminum+Glass
 Watt : 50W
 Voltage : 220-240V~50Hz
 Input current: 0.223A
 Lumen: 5000LM
 CCT: 4000K/6500K
 Size : 219x165x38mm
 Net Weight : 1200g
 Beam Angle : 110°
 PF : 0.9
 Lighting area :0.036m²

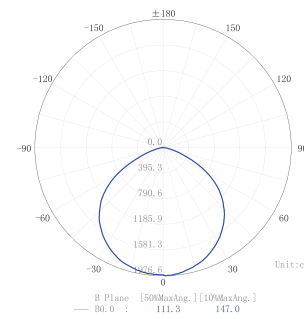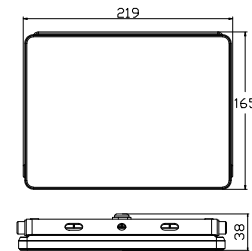

IMT47214 IMT47215



  Model: IMT47214/IMT47215
 Material : Aluminum+Glass
 Watt : 100W
 Voltage : 220-240V~50Hz
 Input current: 0.446A
 Lumen: 10000LM
 CCT: 4000K/6500K
 Size : 294x224x42mm
 Net Weight : 1950g
 Beam Angle : 110°
 PF : 0.9
 Lighting area :0.065m²

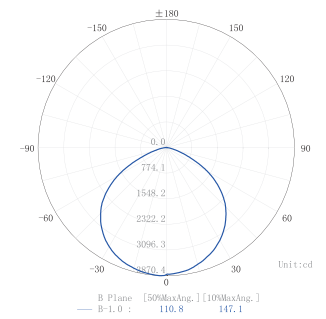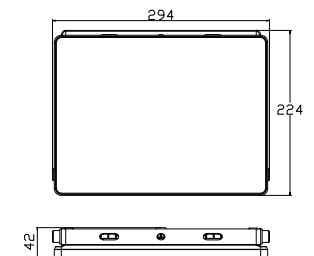

Mureva Lights User Manual

Important User Advice

This Product is Class I and must be Earthed.
Always switch off mains supply before fitting.
Replace any broken or damaged glass as soon as possible.
Ensure all seals are intact and operational after fitting or maintenance.
Do not touch the lamp in use or just after use as there is a risk of being burnt.
Do not cover it with paper or cloth.
Take off from flammable materials.
Do not wash the lamp.
Do not use the lamp where the ambient temperature is over 45°C.
Keeping your eyes with a security distance, the light could cause damage.
This product has no user serviceable parts.
Clean with a damp cloth and dry with a lint free cloth or kitchen towel.
The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced

Installation

Only to be installed outside arms reach.
prepare the mains wiring.
Use the mounting bracket to mark the hole centres for fixing.
Drill holes suitable to accept wall plugs. Insert wall plugs.
Ensure mounting bracket.
Terminate wiring. Pay particular attention to any markings for Replalce all covers.
Fit the floodlight to the mounting bracket with the screws,
Check seals, gaskets and cable gland operation before testing the luminaire.
Turn on power supply and test luminaire.
The installation height should be from 2.25 to 5 meter.

Important Information

It is recommend that luminaires installed and fitted by a qualified electrician ensuring the installation complies to the current building regulations. These products are designed for connection to a 230VAC 50Hz supply.
Any broken or damaged parts should be replaced as soon as possible.
Schneider will not accept responsibility for any claims arising from a poor installation.

Wire connection guide

The brown wire is connected with the L wire of city electricity.
The blue one is connected with the N wire of city electricity.
The green/yellow one is connected with the earth wire.
Power Cord type H05RN-F 3 x 1.0mm², cable length 50cm
Terminal block is not included.
The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.


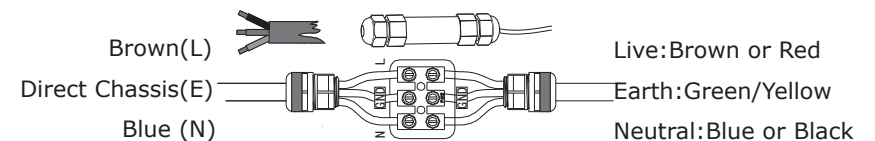 


Diagram Showing

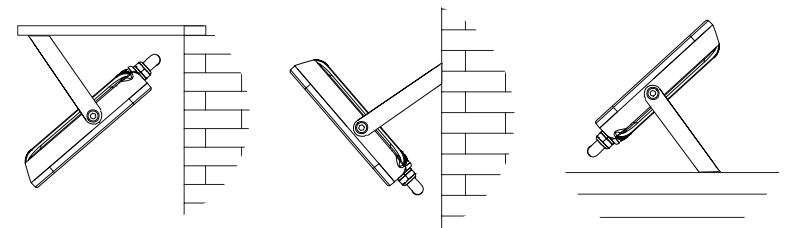 

Patented Product, Counterfeiting Not Allowed.

SCHNEIDER ELECTRIC INDUSTRIES SAS
35, RUE JOSEPH MONIER
92500 RUEIL-MALMAISON - FRANCE